



## FITTING INSTRUCTIONS

Thank you for purchasing a vehicle set of 1BM rear lower wishbone rear bushes for your Land Rover. The following instructions will help you fitting these bushes correctly to your vehicle.

### Vehicles compatible with the purchased vehicle set

Land Rover	Discovery	3	2003-2010
		4	2010-Current
	LR3 (USDM)		2005-2010
	LR4 (USDM)		2010-Current
Range Rover	Sport	L320	2005-2012

### General instructions

If the bushes are a bit difficult to fit



Use washing up liquid or handwash



WD40, copper grease or similar products are not needed.

### Vehicle details

Both vehicles have double wishbone air suspension all around with adjustable height and Terrain Response. This system allows the vehicle to be at ease on both tarmac and rough grounds by adjusting several parameters (Suspension height, throttle response, brake response and gearbox settings).




**FITTING INSTRUCTIONS**

**Bag Contents**



2x 1BM Polyurethane Pieces and 2x 1BM Tubes

The bush should be fitted on the wishbone such as the flange faces the front of the car.

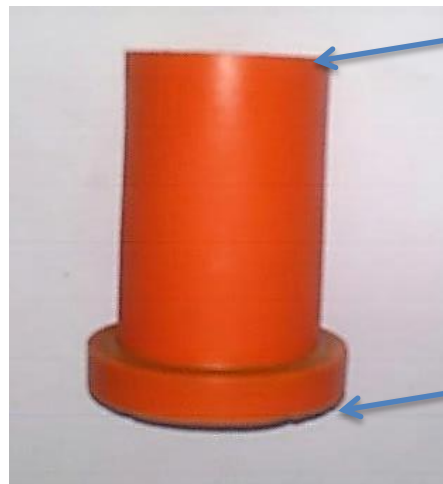

This side towards the front of the car

This side towards the rear of the car

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978664316 or send us an e-mail on [sales@polybush.co.uk](mailto:sales@polybush.co.uk).