

## WIND DEFLECTOR

### MGB

Part Number: GAC4098P



#### TOOLS REQUIRED

A medium sized Phillips screwdriver

**PLEASE NOTE:** We suggest you read these instructions first to give you an idea of the sequencing of fitting this item.

#### INSTRUCTIONS:

1. On cars fitted with “Grey Stick Frame” removeable hood frame, we suggest the whole frame and cover are removed from the car.
2. On later cars where the frame is permanently attached, unclip the header rail from the front screen and unclip all lift-a-dot fasteners on the rear cockpit valance. Then, release the cover from the two securing brackets on the rear of the same valance. With the frame in its “normal” position, flip the rear part of the cover over the top of the frame. This will give you easy access to the mounting brackets. See image 1.
3. You will need to remove the two lower Philips screws from the hood frame mounting brackets, shown as ‘A’ in image 2. We suggest you keep the hood frame upright which will allow you better access to the screws.
4. Having removed these two screws, undo the third top screw but only about three turns of the screwdriver. This will allow you to slide the new bracket under the hood frame and hood roll support roll bracket, whilst keeping the frame attached to the body.

#### QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

[www.rimmerbros.com](http://www.rimmerbros.com)

5. Each bracket is marked “L” or “R”. you will see that there is a slotted hole on each bracket. We have done this to allow the bracket to swivel slightly. You may need to swivel the bracket to miss the radio speakers in the rear wheel arch panels. For cars with no speakers, choose a central position in the swivel cut out.
6. Slide the bracket under the frame, then carefully locate the holes in frame and body. Insert the Philips screws and tighten. If you have speakers fitted, adjust the position of the bracket to clear them.
7. Once you are happy with the position of the brackets you can now fit the deflector. Note: from picture image 3 we suggest that you place the metal washer against the frame, then a fibre washer, a star washer, the bracket, a star washer then the other fibre washer and finally screw in the hand wheel. Tighten the wheel so that the deflector is upright. You will see on the left hand bracket there is an upright metal piece. This is to stop the deflector from being pushed forward at very high speeds.

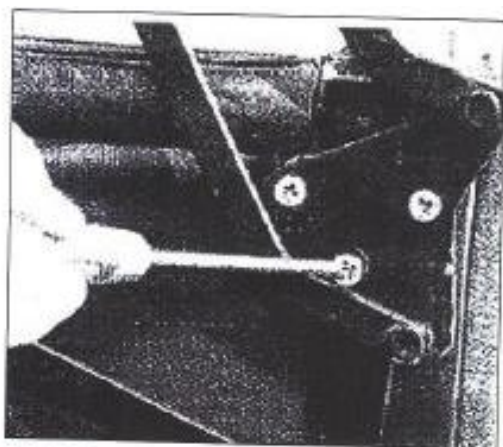


Image 1

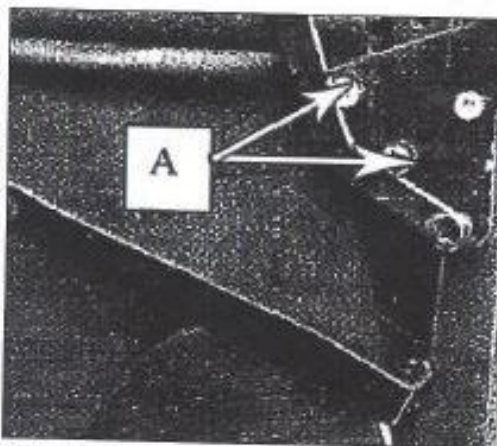


Image 2

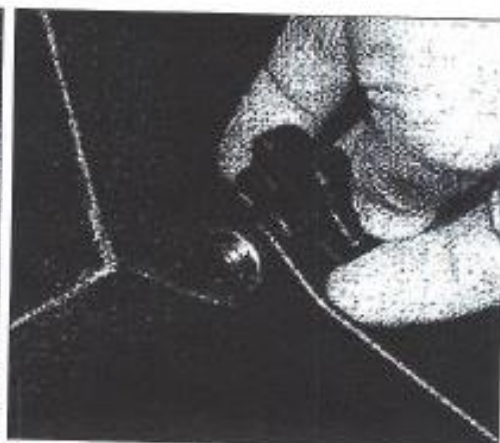


Image 3

## QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: [sales@rimmerbros.com](mailto:sales@rimmerbros.com)

[www.rimmerbros.com](http://www.rimmerbros.com)



A BRITISH COMPANY SUPPORTING BRITISH CARS

### QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: [sales@rimmerbros.com](mailto:sales@rimmerbros.com)

**[www.rimmerbros.com](http://www.rimmerbros.com)**

Registered in England No. 2155394