

FRONT MUDFLAPS

Triumph Dolomite

Part Number: **GAC633DOLFRONT**

Kit Includes:

10 Nut - Part No. NH105041

8 M5 x 20 Pozi Screw - Part No. RIM205


18 M5 Form 'C' Plain Washer - Part No. RIM207

10 Washer-spring - Part No. WL105001

1 Triumph Mudflaps (Pair) - Part No. RX1333

2 Hex HD Setscrew - Part No. 521175

2 Bracket for RT1213FRT - Part No. BRACKET1

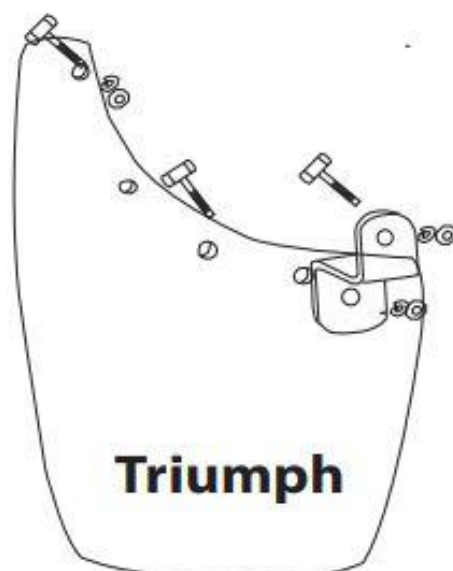

QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

www.rimmerbros.com

Registered in England No. 2155394