

BRAKE SERVO BRACKET

MGF

Part Number: RP1177RHD


KIT CONENTS

X1 BRACKET

X2 BOLTS

X2 NUTS

X4 WASHERS

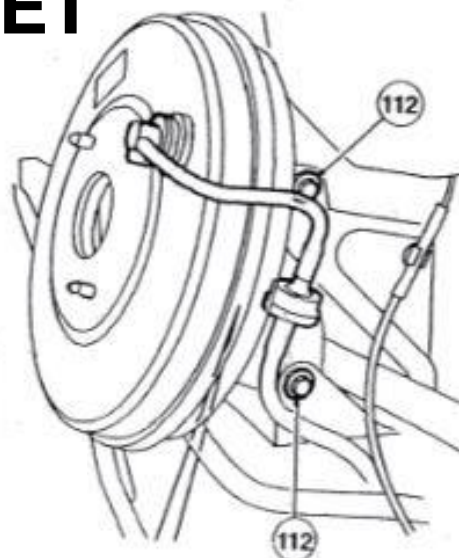

TOOLS REQUIRED

8.5mm Drill

FIXING METHOD

1. Remove two bolts from the inboard side of the servo mounting (see diagram).
2. Using these bolts, secure the servo brace to the servo mounting.
3. Drill through the servo brace to the servo mounting.
4. Drill through the servo brace into the bulkhead with an 8.5mm drill
5. Using the doubler plate on the inside of the bulkhead, secure with the nuts and bolts supplied.

QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

www.rimmerbros.com